

---

# Rogers Pvr Extender Instructions

---

*Rogers Pvr Extender  
Instructions*

*Downloaded from  
[remodelicious.com](http://remodelicious.com) by  
Josiah & Randolph*

---

## MAXIMIZING YOUR HOME ENTERTAINMENT: A COMPLETE GUIDE TO ROGERS PVR EXTENDER INSTRUCTIONS

---

If you're a Rogers cable subscriber, you already know the convenience of pausing live TV, recording your favourite shows, and building a library of must-watch content with your main PVR. But what about the second television in the bedroom, the basement, or the kids'

playroom? This is where a Rogers PVR extender comes into play. Whether you are using an older Digital Box or the newer Ignite TV platform, understanding the correct **Rogers Pvr Extender Instructions** is essential for unlocking seamless television viewing throughout your home. This guide will walk you through everything from unboxing your extender to troubleshooting connection issues, ensuring you get the most out of your Rogers subscription.

---

## WHAT IS A ROGERS PVR

## NEED ONE?

---

A Rogers PVR extender, often referred to as a secondary set-top box or client box, is a device that connects to your main PVR (Personal Video Recorder) over your home network. Unlike having a second standalone PVR, the extender allows you to access the recordings, live channels, and features of your primary box on a different television set. This means you can start watching a movie in the living room, pause it, and then finish it in the bedroom without losing your place. The extender itself does not have its own hard drive; it relies entirely on the main PVR for storage and processing power.

Understanding the specific **Rogers Pvr Extender Instructions** for your model

is critical before setting up the device. The setup process may differ slightly depending on whether you have a legacy Digital Terminal or a modern Rogers Ignite TV system. However, the fundamental principle remains the same: connecting a secondary device to a primary one through your home network.

## BEFORE YOU BEGIN: WHAT YOU NEED FOR A SUCCESSFUL SETUP

---

Before diving into the step-by-step guide, it is helpful to gather the necessary equipment and information. A smooth setup saves time and frustration.

- **Main PVR Box:** This is your primary recording device, typically connected to your main living room TV. It must be powered on

and functioning correctly.

- **The Extender Box:** This is the unit you are installing. It should come with a power adapter and, in some cases, an Ethernet cable or coaxial cable.
- **Remote Control:** Most Rogers extenders use a universal remote that can control both the main box and the extender.
- **Active Subscription:** Ensure your Rogers account is active and includes the rental or purchase of the extender. You may need to contact Rogers customer support or activate the device online.
- **Network Connection:** A stable home network is essential. While some setups allow for MoCA (Multimedia over Coax Alliance)

using your existing cable wiring, others rely on Wi-Fi or Ethernet.

---

## STEP-BY-STEP ROGERS PVR EXTENDER INSTRUCTIONS FOR LEGACY DIGITAL BOXES

---

If you have an older Rogers Digital Terminal (such as the NextBox series), setting up the extender follows a specific pairing procedure. These instructions are designed for the 4K Wireless PVR Extender or similar models.

# Step 1: Connect the Hardware

1. Connect the extender to your television using an HDMI cable. If

your TV is older, you may need composite cables (red, yellow, white).

2. Plug the power adapter into the extender and then into a wall outlet. Do not plug it into a power bar that is switched off.
3. Turn on your television and select the correct HDMI input.

## Step 2: Initiate the Pairing Process

1. On your main PVR, navigate to the **Settings** menu. This is often found under the gear icon.
2. Select **System Setup**, then **Add or Remove Devices**.
3. Choose **Add Wireless Extender** or **Pair New Extender**. The main box will begin searching for the extender.
4. On the extender screen, you should see a message indicating it is searching for a host PVR. This process may take up to two minutes. A code or pairing number may appear on the screen.
5. Enter this code on your main PVR when prompted, or confirm the pairing from the main box menu.

## Step 3: Complete the Activation

1. Once paired, the extender will reboot. This is normal.
2. After rebooting, you will likely see a channel lineup identical to your main PVR. You can now access all your recorded shows and live channels.
3. If prompted, activate the box by calling Rogers or visiting the activation website provided on the screen.

Following these **Rogers Pvr Extender Instructions** for legacy boxes ensures that your secondary TV mirrors the

capabilities of your main unit, provided the network connection remains stable.

---

### HOW TO SET UP A ROGERS PVR EXTENDER ON THE IGNITE TV PLATFORM

---

Rogers Ignite TV uses a different architecture. Instead of a traditional PVR with a hard drive, Ignite uses cloud-based recordings. Therefore, the extender (often called an Ignite TV box or client box) connects to the Ignite modem or gateway. The setup is generally simpler but requires a strong Wi-Fi signal.

## Step 1: Connect the Ignite TV Box Ethernet

1. Plug the Ignite TV box into your TV via HDMI.
2. Connect the power cable and plug it in.
3. Turn on the TV and select the correct source.

## Step 2: Connect to Wi-Fi or

1. The Ignite TV box will prompt you to connect to your home network. If you have a Rogers Ignite WiFi Gateway modem, the box may automatically connect using a pre-configured Wi-Fi profile.
2. If not, select your home Wi-Fi network from the list and enter the password.
3. Alternatively, you can connect a wired Ethernet cable from the box directly to your Ignite modem for a more stable connection. This is recommended if the box is far from the router.

## Step 3: Pair the Remote and Activate

1. Follow the on-screen instructions to pair your Ignite remote with the box. This usually involves holding down the **Menu** and **OK** buttons until the light changes.
2. After the remote is paired, the box will activate automatically. You may need to wait a few minutes for the software to update and the channel guide to populate.
3. Once complete, you will have access to your cloud PVR

recordings and the full Ignite TV interface.

With Ignite, the **Rogers Pvr Extender Instructions** are largely automated, making it one of the most user-friendly systems on the market.

---

### TROUBLESHOOTING COMMON ROGERS PVR EXTENDER ISSUES

---

Even with clear instructions, you may encounter occasional problems. Here are some common issues and how to resolve them.

## The Extender

## Cannot Find the Main PVR

This is a frequent issue with legacy extenders. First, ensure your main PVR is powered on and not in standby mode. Restart both the main box and the extender by unplugging them for 30 seconds. If the problem persists, check your home network. For wireless extenders, ensure the extender is within range of the main PVR. Thick walls or electronic interference can block the signal. If possible, temporarily move the extender closer to the main box to complete the pairing, then move it back.

## Poor Video Quality or Buffering

If your extender shows constant buffering or pixelation, your network connection may be weak. For Ignite TV, try moving the extender closer to the Wi-Fi modem or use a wired Ethernet connection. For legacy systems, check the coaxial cables for damage. You can also reboot your modem and router to refresh the connection. Reducing the number of devices streaming on your network while watching TV can also improve performance.

## No Audio

If you have video but no sound, check your TV's audio settings. Ensure the HDMI cable is fully seated. Sometimes, the extender may default to a different audio format. Navigate to the **Settings** menu on the extender, look for **Audio Output**, and select **Stereo** instead of Dolby Digital if your TV is older.

## Remote Control Not Working

If your remote does not control the extender, check the batteries. For Ignite remotes, re-pair the remote by holding the **Menu** and **OK** buttons. For legacy

remotes, ensure the remote is set to control the extender (some remotes can control multiple boxes). Look for a button labeled **TV** or **AUX** and press it until the light blinks, then try again.

---

### TIPS FOR GETTING THE MOST OUT OF YOUR ROGERS PVR EXTENDER

---

Once you have successfully followed the **Rogers Pvr Extender Instructions** and have your secondary TV up and running, consider these tips to enhance your viewing experience.

- **Use a Wired Connection When Possible:** While Wi-Fi is convenient, a wired Ethernet connection offers the most stable performance, especially for 4K

content. If your extender is near a router or modem, plug it in.

- **Position Your Main PVR Wisely:**

For legacy wireless extenders, the main PVR acts as a hub. Place it in a central location, away from large metal objects and other electronics like microwaves or cordless phones.

- **Keep Software Updated:** Rogers frequently releases firmware updates for their boxes. Ensure automatic updates are enabled in the settings menu. Updated software often fixes bugs and improves performance.

- **Manage Your Recordings:** Since the extender relies on the main PVR's storage, regular housekeeping is important. Delete

shows you have watched to free up space for new recordings.

- **Use Whole Home PVR**

**Features:** One of the best reasons to have an extender is the ability to watch recordings from any room. Experiment with pausing a show on one TV and resuming it on the extender. This feature is seamless on both legacy and Ignite systems.

---

## UNDERSTANDING NETWORK REQUIREMENTS FOR YOUR EXTENDER

---

A crucial part of any **Rogers Pvr Extender Instructions** guide is understanding the role of your home network. Without a robust network, the extender will struggle to deliver a

consistent signal.

For **Ignite TV**, the boxes communicate over your home Wi-Fi. Rogers recommends internet speeds of at least 25 Mbps per stream for HD content and 50 Mbps per stream for 4K. If you have multiple extenders in use simultaneously, your total bandwidth demand increases accordingly. The Ignite gateway is designed to prioritize TV traffic, but heavy usage of other devices can still cause slowdowns.

For **Legacy PVR extenders**, the network often uses MoCA technology. This means the boxes communicate over your home's existing coaxial cable wiring. In this case, the quality of your coaxial cables and splitters matters. Older or damaged splitters can introduce noise and weaken the signal, leading to

frequent disconnections or poor video quality. If you have a legacy extender that keeps dropping its connection, ask a Rogers technician to check the signal strength at the coaxial outlets in your home.

---

## **FREQUENTLY ASKED QUESTIONS ABOUT ROGERS PVR EXTENDERS**

---

# Can I use a Rogers PVR extender with

## any TV?

Yes, most modern TVs with an HDMI port will work. Older TVs with only composite inputs may require an adapter, but

functionality may be limited.

## How many extenders can I